

Beeshu, Inc. warrants to the original purchaser, that this joystick will be free of defects in material and workmanship for 90 days from date of purchase.

To receive warranty service:

1. DO NOT return your joystick to the retailer.
2. The original purchaser must return enclosed warranty card along with dated sales receipt. Carefully pack your joystick in a strong box and return it prepaid to Beeshu, Inc. 930 Carter Rd. Winter Garden, FL 34787. Please enclose a cashier's check or money order for \$ 5.00 to cover return postage and insurance.
3. If you have questions, contact Beeshu Customer Service at 407-877-2100. Service department is available Monday-Friday from 9:00 A.M. to 5:00 P.M. EST.

This warranty does not apply to any unit which has been improperly installed, handled, abused, nor to any unit which has been repaired or altered by unauthorized agencies. Under no circumstances will the buyer be entitled to consequential or incidental damages, this limited warranty gives you specific legal rights which vary from state to state.

THIS WARRANTY APPLIES ONLY TO EQUIPMENT PURCHASED AND USED IN THE UNITED STATES.

WARRANTY

ANGLER™

TOTAL CONTROL™ PAD

Compatible with
Super Nintendo®
Entertainment System



- ▶ Total Control™ Contour Grip
- ▶ Color-Coordinated Independent Turbo or Auto Fires
- ▶ Slow or Super Slow Motion

Beeshu®

Now you're playing with **TOTAL CONTROL™!**

CONNECTING YOUR *ANGLER*[™]

- ▶ Disconnect any existing joystick from port you wish to use.
- ▶ Make sure your Angler plug lines up with game port.
- ▶ Push plug all the way into the game port.
- ▶ When disconnecting your joystick ALWAYS pull the plug, NOT the cord.
- ▶ When connecting or disconnecting plug, make sure unit is turned OFF.

PROPER CARE AND MAINTENANCE OF YOUR *ANGLER*[™]

- ▶ Keep in a dry, clean area.
- ▶ When operating, make sure your hands are clean. Use only a damp soft cloth to clean your Angler.

FEATURES OF YOUR *ANGLER*[™]

- ▶ START button operates the same as your Super NES[®] pad.
- ▶ SELECT button operates the same as your Super NES[®] pad.
- ▶ 'B' 'A' 'Y' and 'X' buttons also operate the same as your Super NES[®] pad.
- ▶ TURBO / AUTO-FIRE: 'B' 'A' 'Y' and 'X' buttons all have a TURBO / AUTO-FIRE switch which works as shown in the picture. SELECT AUTO-FIRE mode for continuous fire without pushing fire button, SELECT TURBO-FIRE mode for continuous fire while pushing fire button.

NOTE: On some games, TURBO / AUTO-FIRE Will restrict jumping height Therefore leave TURBO / AUTO-FIRE In OFF position.

- ▶ DIRECTIONAL INSERTS: For quicker directional response, simply insert one of the control extensions into the "Rocker Switch" and you will be dishing up more control !!!
- ▶ SLOW MOTION switch is located in the middle of your Angler. To operate simply turn switch to SLOW or SUPER SLOW position, Your game will automatically slow down. Use this feature when learning new games or getting through difficult levels. To return to normal play, turn switch to NORMAL position. On some games you may also have to hit the START button to resume normal play.

NOTE: Slow motion function may not work on every game.

